

Air Lumbar Pump – Replacement Guide

1. Disassemble the air lumbar by unscrewing the 4 screws.



2. Pull the bladder if this needs to be replaced.



3. Pull the valve from the hose if this needs to be replaced.



4. Replace the valve and/or bladder as required.



5. Place the bladder back into the housing and reassemble.

