


Gas Lift – Replacement Guide

1. Remove the gas lift from the mechanism. Set the mechanism on a flat surface and push the square lever down, activating the gas lift. Do this a few times to "pop" the gas lift from the mechanism. Don't be alarmed if the gas lift extends. If this does not work, flip the mechanism upside down and hit the gas lift with a rubber mallet until it dislodges from the mechanism.

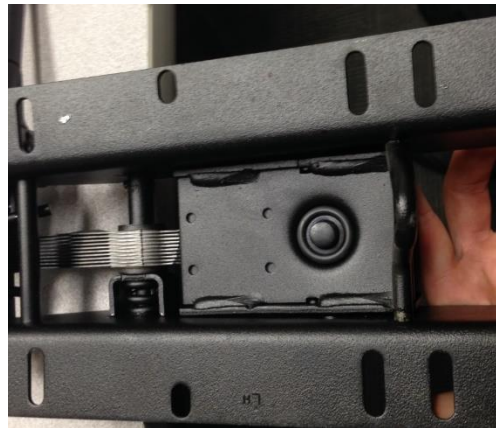

2. Remove the gas lift cannister from the base: Flip the base upside down and hit the cannister with a rubber mallet multiple times until it dislodges from the base.



3. Insert the gas lift into the mechanism and seat assembly
4. Insert the seat/mechanism/gas lift assembly into the base