

We at ergoCentric, want to ensure the adjustment features of your chair are easily understood. We believe the proper use of these features is critical and will ensure you receive the full benefits of your ergonomic chair.

Call us if you have any questions and ask for a customer support representative.

ergoCentric®

ph: 1 866 GET ERGO | 905 696 6800

fx: 1 800 848 5190 | 905 696 0899

service@ergocentric.com

ergocentric.com



Printed in Canada.

Adjustability understood™

To get the most out of your chair, please take a minute to learn about its adjustment features.

Read this user guide

Boardroom airCentric

ergoCentric®
ergocentric.com

FREE FLOAT:

To free float chair, push the lever forward and leave it in the forward position. Push the lever back to lock the chair in the upright position.

SEAT HEIGHT:

To raise the seat, pull up on the lever while raising your weight off the chair. To lower the seat, pull up on the lever while sitting. Release the lever to lock.

BACK HEIGHT:

To adjust the back height, push the **OVAL** paddle back away from the seat and adjust the backrest up or down to the desired height. Pull this paddle towards the seat to lock.

