ergoCentric
ergocentric.com

tCentric – Adding a Headrest

Instructions:

1. Remove the Back Cover
2. Locate the 2 marks inside the back cover and drill holes for headrest using 5mm (3/16") drill bit

3. Place the Back Cover on chair. The hole on back caps must align with the nut on back

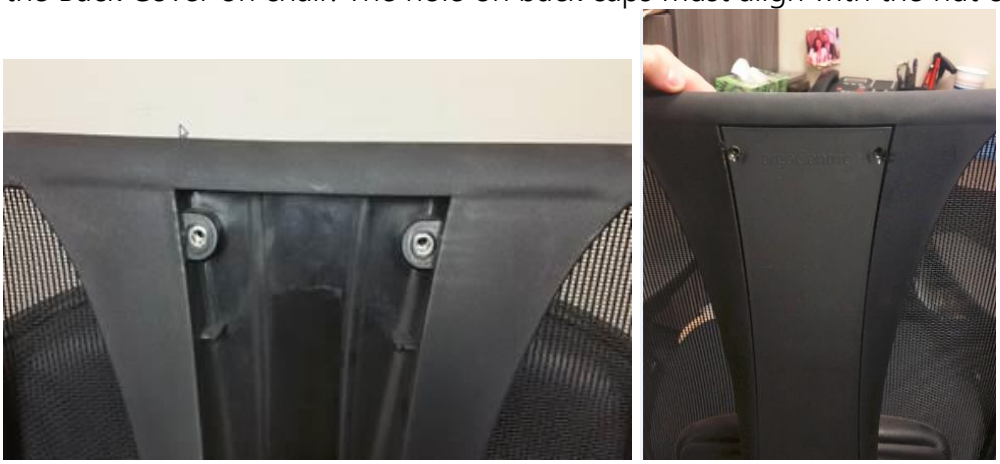

4. Install the headrest using M6*35 Panhead screws

ergoCentric Seating Systems
275 Superior Blvd | Mississauga, ON | Canada L5T 2L6
ph: 1 866 GET ERGO | 905 696-6800
fx: 1 800 848-5190 | 905 696-0899
ergocentric.com